Windows multipoint server 2012 服务端软件安装教程

# 目录

1.	安装服务器系统	. 3
2.	安装专用软件	. 3
3.	服务器设置及终端连接	. 6

## 1. 安装服务器系统

■ 安装 windows multipoint server 2012 系统,

比如:EN-US\_WMS\_PREM\_InstallDVD.iso(英文版), 光盘文件可以从供应 商或是微软获得

系统安装方式可以选择光盘或是 U 盘安装;

光盘安装:请将系统 ISO 文件刻录到 DVD 光盘上,然后在有光驱的服务器上利 用此 DVD 碟片来安装

U 盘安装:请用 UltralSO 等软件将系统 ISO 文件刻录到 U 盘上,然后利用此 U 盘安装

■ 通过 windows 更新来更新系统到最新版本

2. 安装专用软件

安装 Share\_WMSZeroClientService\_Setup\_14\_0904\_S0153\_G1051.exe 软件;

双击 "Share\_WMSZeroClientService\_Setup\_14\_0904\_S0153\_G1051.exe" "开始安装进程,按如下图示操作:



SHARE WIVIS ZE	ro Client Manager - InstallShield Wizard
SHARE WMS Zero Clien computer. Click Install t	t Manager requires the following items to be installed on your o begin installing these requirements.
Status Requirement	
SHARE WMS Ze	ero Client Manager - InstallShield Wizard 💌
The installation Package (×64) the installation	n of Microsoft Visual C++ 2010 Redistributable appears to have failed. Do you want to continue ?
	是(Y) 否(N)
2nocaming microsore nodar er n e	
	Install Cancel
SHARE WMS Ze	ro Client Manager - InstallShield Wizard
SHARE WMS Ze	ro Client Manager - InstallShield Wizard InstallShield Wizard Complete Setup has finished installing SHARE WMS Zero Client Manager on your computer.



备注:软件的安装过程无需特殊设置,如果提示重启,则重启电脑

## 3. 服务器设置及终端连接

4.1 把服务器状态调节到 station 模式 (打开 Multipoint Manager,更改主机 模式为 station 模式)

۰						MultiPoint	Manager		- 🗆 🗡
Home	e Station	Users	Virtual Desktops	Network St	tations				Windows MultiPoint Server 2012
									🛕 1 😧 Help 👻
Computer Local host4-pc	Status	Product Windows MultiPoint Se	rver 2012 Premium	Stations 1	Licenses	Disabled	Mode ^		host4-pc Tasks       %     Edit server settings       Image: Settart the computer       Image: Shut down the computer       Image: Switch to console mode       Image: Shut down the computer       Image: Shu
									Home Tasks
🛔 host4-pc									Add or remove MultiPoint servers
Computer info	ermation				You d licens Disk p	o not have a client ac es" tasks to resolve th rotection is disabled.	cess license for all stations on	this computer. Use the "Add client access	Add or remove meanPoint Servers
1 Item									

#### 3.2 建立终端使用的用户

在"multipoint manager"管理软件里,能快速创建终端 登陆用的用户

*			MultiPoint Manager	_ 🗆 🛛
Home	Stations Users Virtue	al Desktops Network Stations		Windows MultiPoint Server 2012
				🛕 1 🔞 Help 👻
User Administrator Administrator Suser10 Suser10 Suser13 Suser2 Suser	Computer Computer Nost4-pc Nos	Full Name	Account Type Administrator Standard Sta	Administrator Tasks
45 Items				

4.3 连接使用

此时把 FL500W 与服务器接在一个局域网内,并保证 FL500W 和服务器网络是通的,FL500W 通电以后,服务器管理界面能看到终端,把此终端指派到目前的服务器即可

1)服务管理器界面

		MultiPoint Ma	nager	- 🗆 ×
Home	Stations Users	Virtual Desktops Network	Stations	Windows MultiPoint Server 2012
				🕜 No alerts 🔞 Help 🔻
Hosts		Clients		General Task Item
Computer Ho HOST4-PC F1	Client Name	Status There are no items in this view	Assignment Ld	<ul> <li>HotKey setting</li> <li>Failover by host</li> <li>Failover by station</li> <li>Start scan</li> <li>Select all</li> <li>Unselect all</li> </ul>
< >	<		>	
	Assigned Clie	ents: VDI-7B08		
Client Name	Status There are no i	Assignment In	cation M	

管理界面分三块,左边是主机,右边是网络中的终端设备,下面是已经连接到 某个主机的终端列表

#### 2)发现终端

*				M	ultiPoint Manage	er		- 🗆 X
Home	Stations	Users	Virtual Desktops	Network Stations				Windows MultiPoint Server 2012
								🧭 No alerts 🛛 😧 Help 👻
Ho	sts				Clients			General Task Item
Computer HOST4-PC	HotKey F1	Client Name		Status	Assianment N/A	Location N/A	MAC 50:16:10:00:01:18	🝯 HotKey setting
								Failover by host
								Failover by station
								Select all
								E Unselect all
		<					>	
			Assigned	Clients: VDI-7B08				
Client Name		Status	Assignment	Location	MAC	IPaddre	ss Model	
			There are r	io items in this view				
<								
0 Item							,	

在客户端列表里可以发现网络中的客户端设备

3) 指派终端到指定的服务器

٠				N	/ultiPoint Manager			- 🗆 ×
	2,	88	S.					Windows MultiPoint Server 2012
Home	e Stations	Users	Virtual Desktops	Network Stations				
								🔇 No alerts 🔞 Help 🔸
	Hosts				Clients			Device Task Item
Computer	HotKey	Client Name		Status	Assignment	Location	MAC	+ Assign to this server
HOST4-PC	F1	WMS Client		Not Connected	N/A	N/A	50:16:10:00:01:18	Change location name
								A Network setting
								Hestart device
								C Update hrmware
								Identify client
								General lask Item
								HotKey setting
								Failover by host
								🚔 Failover by station
		<					>	🔍 Start scan
			Assigne	d Clients: VDI-7B08				🚈 Select all
Client Nam	ie	Status	Assignment	Location	MAC	IP address	Model	B Unselect all
			There a	e no items in this view				
<							>	
l Item								

点击有边的 "Assiqn to this server"来连接左边 主机列表里的主机

### 4)已经连接主机的终端在最下面的列表里能看到

\$						MultiPoint Manager					-	. 🗆 🛛
1			88	2.							Windows Server 201	MultiPoint 2
	Home	Stations	Users	Virtual Desktops	Network Stations						🔮 No alerts	😢 Help 🔹
	Hosts					Clients				General Task Item		
Computer HOST4-PC	F	łotKey 1	Client Name		Status There a	Assignment re no items in this view	Location		MAC	🔍 Start scan		
			<							>		
				Assigne	d Clients: VDI-7B08							
Client	t hlame		Statur	Assignment	Location	MAC		Daddress	Model			
<	MS Client		Connected	HOST4-PC	N/A	50:16:10:00	:01:18	192.168.16.107	Device	>		
U Item												

#### 5) 取消指派

如果终端设备指派到了其它主机上,可以清除这台客户端以前的指派

\$					MultiPoint Manager				- 🗆 ×
		88	3.						Windows MultiPoint Server 2012
Home	Stations	Users	Virtual Desktops	Network Stations					
									🔇 No alerts 🛛 Ə Help 👻
н	osts				Clients				Device Task Item
Computer	HotKey	Client Name		Status	Assignment	Location	MAC		+ Clear assignment
HOST4-PC	F1			There	are no items in this view			L	O Identify client
									General lask Item
									HotKey setting
									Failover by host
									Failover by station
									🔍 Start scan
									📧 Select all
									8 Unselect all
			Assigne	d Clients: VDI-78	18			,	
Client Name		Status	Assignment	Location	MAC	IP addre	ss Model	_	
🔽 💼 WMS Clie	nt	📀 Connected	HOST4-PC	N/A	50:16:10:00	:01:18 192.168.	.16.107 Device		
٢								>	
1 Item									

然后重新指派到新的主机即可

至此,终端上就会出现登陆界面,输入设定好的用户名和密码即可登陆使用;